Call forward

 Press Menu > Features > Call Forward.
 Select the line, the type of forward, enter the destination number and status and press OK.

Call Mute

Press ⅔ to Mute the microphone during the call.
 Press ⅔ again to un-mute the conversation.

Call list

Phonebook

Access phonebook:

1. Press Contact soft key or Menu > PhoneBook > Local Contacts.

2. Select All Contacts or other group.

3. To dial an entry, press Dial soft key or pickup handset or press ∩ or •(1).

Add new entry:

 Press Contact soft key, Press All Contacts or other group > Press Add.
 Enter name and number and press OK soft key.

Programmable keys

DSS keys :

 You can use the phone web interface to configure the keys of the main screen.
 You can press any keys which is still blank or long press the key that have configured, select a type and value, press OK key.
 Press Menu > Basic > Keyboard > DSS Key settings.
 Select the key, type and value, press OK key.

Other keys :

 You can also configure shortcuts for the navigation keys, and which will be available in idle mode.
 Press Menu > Basic > Keyboard, select among the configurable items, and select your desired type and value, press OK key.

Fanvil Technology Co., Ltd

www.fanvil.com Email:sales@fanvil.com Add: 4F, Block A, Building 1#, GaoXinQi Hi-Tech Park (Phase-II),67th District, Bao'An, Shenzhen, China



1. Press 😋 , redial a call number.

Do not disturb

 Press ► key > Move to the a icon > OK key, or Menu > Features > DND.
 Select the Mode, and press OK soft key.

Voice message

 To access your voice mailbox, press Voice message ➤ or Menu > Message > Voice Message, number of messages will be indicated if provided by your server or PBX.
 Select the line and press Play to call.



Press Menu > Basic > Bluetooth
 Press ok to enter the bluetooth open interface.
 After opening, press scan to display the list of bluetooth scanned. Select any device and press connect.





X7C

Quick Installation Guide

Fanvil Technology Co., LTD. www.fanvil.com

Packaging list



Screen icon

In hands-free mode	Call is on hold	Internet is connected	Missed call(Status bar)
In headset mode	Auto-answering activated	New SMS	Received call
In handset mode	Call Forward activated	New VM Messages	Vialed call
Wute activated	Keypad locked	Do not disturb activated(rec	d) 🔏 Missed call(s)
Ringer off	Internet is disconnected	Do not disturb disabled(Blue	e) 🕞 Forward call

Keys features

Soft keys



Left and right navigation keys, Return key Up navigation key, Shortcut to call log Down navigation key, Shortcut to Status OK key, Shortcut to Menu Return key, Go back to the previous directory

K Hold key, Hold/Resume the call

In idle mode: ringer off In communication mode: mute/un-mute a call In idle mode or during ringing: increase or decrease ringer volume In communication: increase or decrease earpiece, headset or hands-free volume

Voice message key

Headset key, Activate/deactivate Headset

C Redial key, Access to redial the last record

Page-Jump key, It can switch DSS pages

Hands-free key, Activate/deactivate hands free

(# a) Long press to lock keypad. Enter PIN to unlock keypad (default 123)

- 2 -

Installation the device

Bracket desktop installation



Connecting to the Device

Please connect power adapter, network, PC, handset, and headset to the corresponding ports as described in below picture.

USB port: connect USB device (U disk, WIFI adapter)
 Power port: connect the power adapter.
 Network port: connecting local area network or internet.
 PC port: the network port connect to the computer.
 Headset port: connect headset.
 Handset port: connect IP Phone handset.



Configuration

Configuration via Phone

1. Press Menu > Advanced (Default password 123) 2. Select Network: To configure the Network Settings (IPv4/IPv6/IPv4&IPv6, DHCP/Static/PPPoE) 3. Select Accounts: To configure enable the account, fill the SIP server address, port, user name, password etc.

Configuration via Web

1. Get the IP address from the phone: Press key, or Menu > Status > IP.

2. Login: Input the IP address in the web browser. The PC and phone should be in the same IP address segment(The default username and password are both 'admin' .) 3. Configure: Select network/Account etc, and fill the relevant content.

Language setting

Press Menu key > Basic > Language.
 Select the desired language and press OK soft key.

Making a call

1. **Pre-dialing**: enter the phone number and pick up the handset.

2.Direct dialing: lift the handset and enter the phone number.

3. Handsfree: enter phone number and press $|0\rangle$ or vice versa.

4. Headset: enter phone number and press $\, \Theta \,$ or vice versa.

5. **Designated line**: press line key, enter phone number and press dial key.

Accepting a call

With the handset: pick up the handset.
 With a headset: press

 .

3. With the handsfree: press ().

Putting a call on hold

1. Press & key or Hold soft key, caller is put on hold 2. To retrieve the call press key or Resume soft key. Note: with more than one active call, select desired call with the on avigator keys and use the corresponding soft key to hold or resume.

3-party conference

 Once in line with 1st caller, press Conference soft key, 1st caller is put on hold.
 Then call the 2nd number.
 After, 2nd call is established, press Conference soft key to set up the conference.

Call transfer

Attended transfer:

 Press Xfer soft key during the active conversation, the call is put on hold.
 Dial the second telephone number.
 When the call is answered, then press Xfer soft key to complete the operation.

Blind transfer:

 Press Xfer soft key during the active conversation, the call will be on hold.
 Then enter the 2nd telephone number and press Xfer soft key.